

MCH-205

DESKTOP PA MICROPHONE
MICRÓFONO DE MEGAFONÍA PARA SOBREMESA
MICROPHONE DE SONORISATION POUR TABLE
MICROFONE DE MEGAFONIA PARA MESA



QUICK START GUIDE/GUÍA RÁPIDA/
GUIDE DE DÉMARRAGE RAPIDE/GUIA RÁPIDO

FONESTAR

DESCRIPTION/DESCRIPCIÓN/DESCRIPTION/DESCRIÇÃO

EN

- Desktop microphone with chimes and preamplifier

ES

- Micrófono de sobremesa con tonos musicales de aviso y preamplificador



FR

- Microphone de table avec tons de musique d'avertissement et préamplificateur

PT

- Microfone de mesa com tons musicais de aviso e pré-amplificador

CONTROLS AND CONNECTIONS

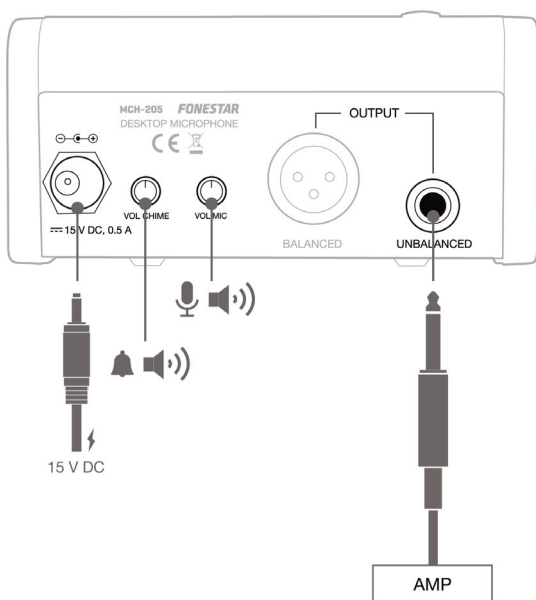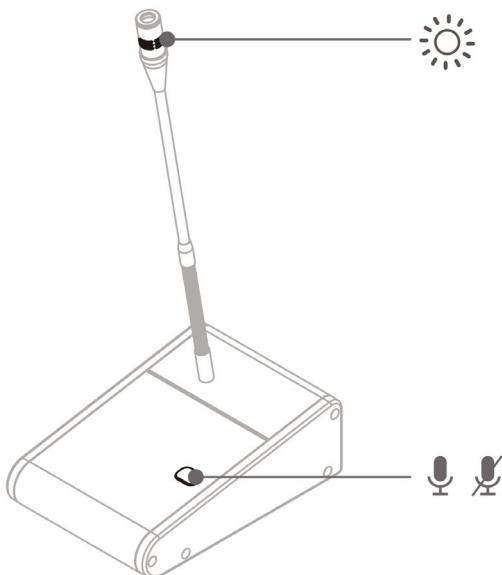

	FLASHING / INTERMITENTE / CLIGNOTANT / INTERMITENTE
	ON / ENCENDIDO / ALLUMÉ / LIGADO
	OFF / APAGADO / ÉTEINT / DESLIGADO



EN Each time the microphone on/off button is pressed the chimes are activated, promptime them to be played before and after the message.

ES Los tonos musicales sonarán antes y después del mensaje cada vez que pulse el botón de activar/desactivar del micrófono.

FR Les tonalités musicales sonneront avant et après le message, cahque fois que vous appuyez sur le bouton activer/desactiver le microphone.

PT Os tons musicais irão soar antes e depois da mensagem, de cada vez que pressione o botão de ativar/desativar o microfone.



MIC VOL



STATUS



MIC



CHIME VOL